



# E x t r e m e   C o m f o r t

---

---

Manufactured by Nightingale Corp.

---

---





**Arm Pivot Adjustment**  
(Underneath Pad)  
Push button up to pivot,  
release button to lock into  
position.

**Pneumatic Height  
Adjustment**  
Pull lever up to lower seat.  
To raise, pull lever up with  
your weight off seat.

**Tension Knob**  
Turn clockwise to increase  
tension, turn counter-  
clockwise to decrease  
tension.

**Horizontal Arm  
Adjustment**  
Pull arm out from seat to  
desired position from  
bottom of arm, for  
increased width. Push  
arm in to decrease width.

**Infinite Position Tilt Lock**  
Turn lever up to lock, turn  
lever down to unlock.



**Ratchet Height Adjustable  
Headrest** - simply lift  
headrest to desired position  
and headrest locks auto-  
matically. To lower headrest  
lift headrest to top position.

**Coat Hook**

**Horizontal Lumbar  
Adjustment**  
Press button down and move  
lumbar to desired depth,  
release button to lock into  
position.

**Lumbar Height  
Adjustment**  
Lift lumbar to desired  
position and lumbar locks  
automatically. To lower lumbar  
lift lumbar to top position.

Cast aluminum base with  
anti-slip pads

2" mag wheel carpet casters

**Arm Height Adjustment**  
To raise or lower arm  
height, pull trigger in and  
move to desired position.  
Release trigger to lock into  
position.

**Seat Slider**  
Pull lever bar up to unlock,  
move seat to desired  
position with one hand on  
back and no weight on seat,  
release lever to lock into  
position.

